


This drawing, specifications, and concepts contained here in are the sole property of Dart Aerospace, and may not be reproduced or used in any fashion without the prior written permission of Dart Aerospace.

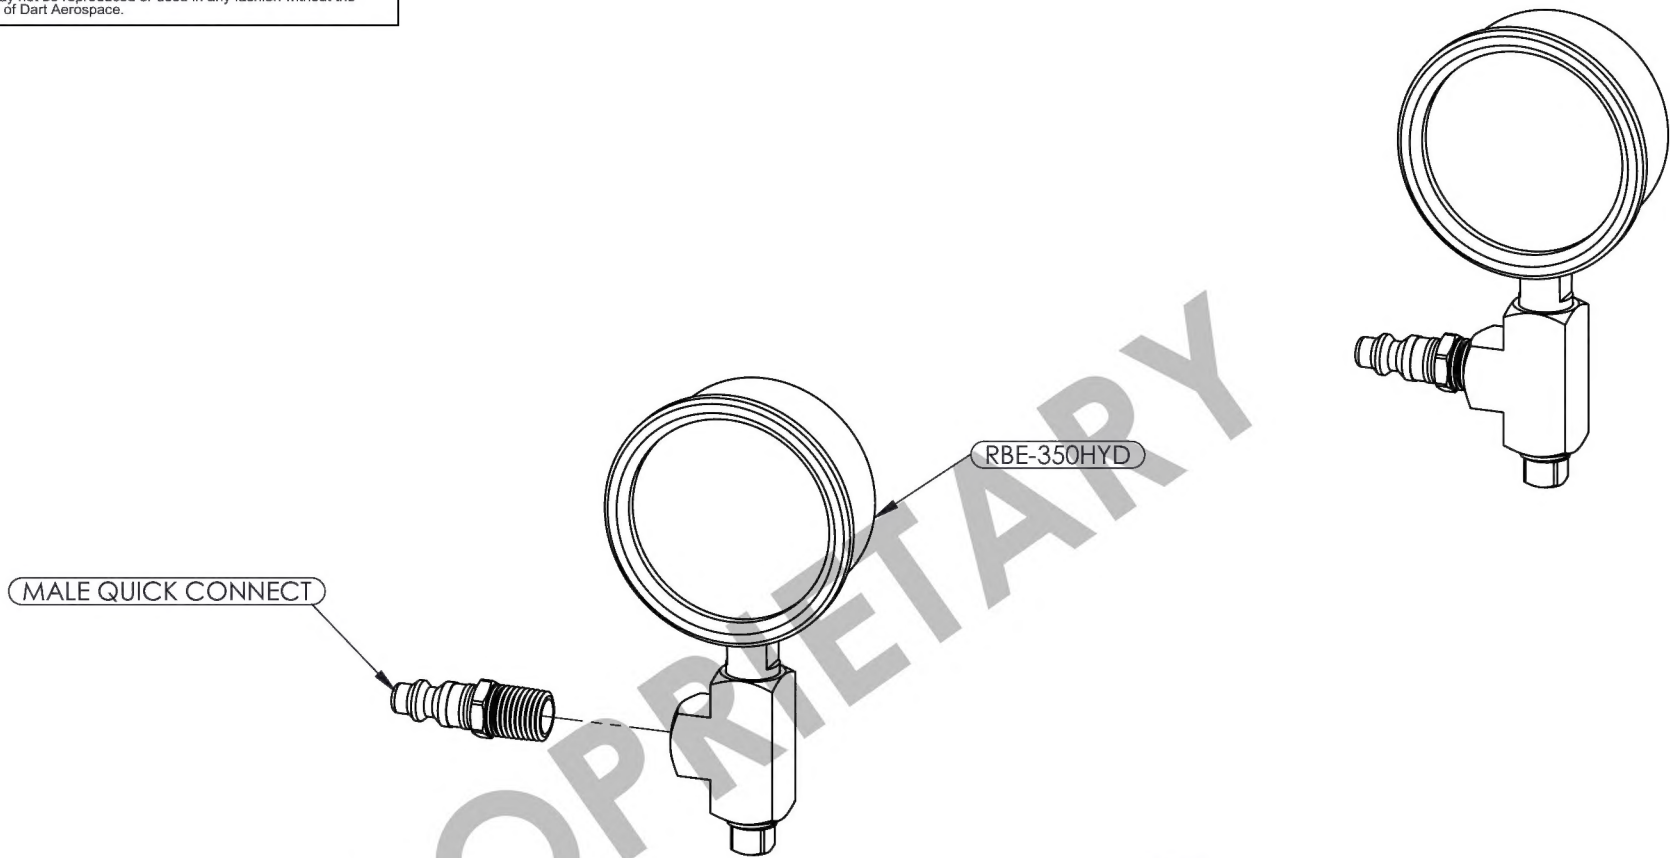

NOTE:

FOR CALIBRATION:

1. REPLACE SCHRADER VALVE ASSEMBLY WITH MALE QUICK CONNECT.
2. CALIBRATE GAUGE.
3. REASSEMBLE WITH SCHRADER VALVE ASSEMBLY USING APPROPRIATE THREAD SEALANT.



190 S. Danebo Ave., Eugene, OR. 97402
1-800-556-4166
e-mail: sales@dartaero.com
dartaerospace.com

TITLE HYD. ACCUM. FITTING GAUGE			
DWG NO. RBE-350HYD	REV 2	CUSTOMER 1 OF 1	
SCALE 1:2	DATE 9/9/2009	SHEET	1 OF 1